



**2005-2006 MUSTANG  
 AUTOMATIC/MANUAL PEDAL INSTRUCTIONS  
 CDC # 110125 (Manual)  
 CDC #110126 (Automatic)**

**Note: Read installation instructions before starting.**



**Component List:**

- Accelerator Pedal
- Brake Pedal
- Clutch Pedal (Manual Only)
- Alcohol Packet
- Adhesive Promoter Packet

**CDC**

**Installer**

- |                          |                          |
|--------------------------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> |

**Tools Required:**

- Hook/Pick Tool
- Trim/Body Fork Tool (optional)
- Hot Water (optional)
- Dish Soap (optional)


**Attention:**

***Failure to follow instructions may result in damage of this product. Classic Design Concepts, LLC will not be responsible for improperly installed Pedals.***

## CD4II3BQ

1. Remove the stock brake and clutch pedal covers using an angled pick tool or trim/fork tool. Use the back of the new CDC Pedals for reference, as the OEM pedals are installed with the same rubber lip around the metal base. Start with the tool from the back of the pedal under the rubber lip. Work the tool around to the front, then around the perimeter of the pad.

*(Figure 1)*

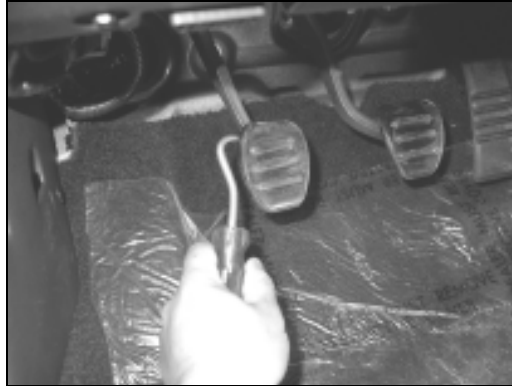

**NOTE:** The stock accelerator pedal will not be removed.

2. Install the brake and clutch pedals to the stock metal assemblies in the exact same way the stock pedals were attached. To aid in the installation of the pedals, use hot water to soften the rubber lip. Use dish soap as a lubricant. Place the rubber lip of the pedal over the edge of metal assembly, working down each side of the pedal toward the bottom, working the rubber lip of pedal over the edge of metal assembly.

**NOTE:** The rubber lip of the pedals MUST be over the edge of the metal assembly all of the way around the pedals.


**CAUTION:** The use of tools such as a flat screwdriver, 90-degree pick tool, or trim/panel tool may help in attaching brake and clutch pedal covers, BUT be careful NOT to damage rubber lip of Pedal Covers. CDC will not warranty pedals due to installation damage.

*(Figure 2)*



## CD4I13BQ

3. Test fit CDC accelerator pedal to OEM pedal, to understand fitment. DO NOT REMOVE TAPE BACKING AT THIS TIME.
4. Clean OEM accelerator pedal surface with alcohol wipe (supplied). Allow time for pedal to dry completely.
5. Apply Adhesive Promoter (supplied) to OEM accelerator pedal surface. Allow time for pedal to dry; there should be no 'wet' areas prior to installing CDC pedal.
6. Once Promoter is dry, remove tape backing from CDC pedal cover and apply CDC pedal to OEM pedal. Press firmly on pedal to ensure bond.

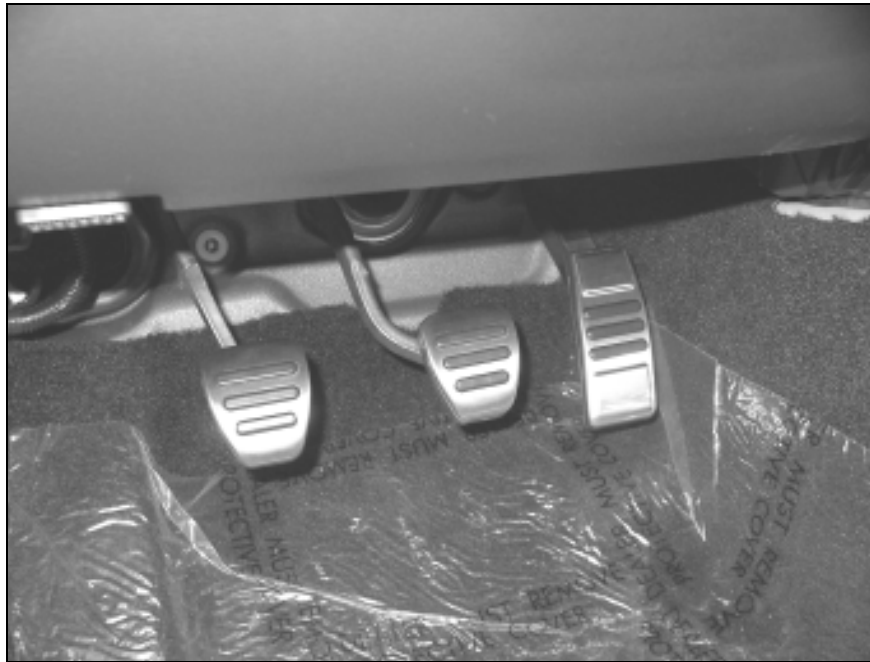

Enjoy your new CDC Pedals!

**Thank you for choosing Classic Design Concepts for your restyling needs. If you have any questions or concerns regarding installation please contact [Tech@classicdesignconcepts.com](mailto:Tech@classicdesignconcepts.com) or call 248-624-7997.**